

## Panic Exit Hardware

**379.N**  
**379M.N**

### Introduction

The Briton 379.N push bar panic exit device with mortice panic nightlatch is suitable for single and double doors. Featuring an anti-thrust device to prevent forced latch retraction, this well-known exit device is ideal for public areas where additional security is required.

**NOTE: The most important consideration when specifying panic exit hardware is who might be in the building in the event of an emergency.**

### Features & Functions

- Surface mounted push bar panic exit device operating a dual profile cylinder mortice nightlatch.
- For single doors, and in combination with Briton 376, on the active leaf of non rebated double doors.
- Products designed to satisfy panic or emergency exit applications
- Suitable for use on fire & smoke doors up to 1300mm wide
- Anti-thrust device prevents forced latch retraction
- Site reversible - easy to hand on site
- Tubular steel cross bar can be cut on-site to suit door width
- Tested in excess of 200,000 cycles
- All versions supplied with fixings and self-adhesive "Push Bar to Open" signage
- Supplied with dual profile cylinder mortice nightlatch (cylinder not included)



379.N.SE



### Certification

UKCA Marked to EN 1125 (1121-CPR-UK-AAA7569) and EN 179

CE Marked to EN 1125 (2812-CPR-AAA0011) and EN 179

Certifiere Approved (CF5506)

Fire tested to EN 1634-1 for use on fire doors up to 2hr timber / 4hr steel

Environmental Product Declaration in accordance with ISO 14025 and EN 15803

DoP available at [www.britondops.co.uk](http://www.britondops.co.uk)


## Panic Exit Nightlatch Briton 379.N

Product features	Product references	
	379.N	379M.N
UKCA & CE marked	■	■
Panic exit device to EN 1125	■	■
Emergency exit device to EN 179	■	■
Device type	Push bar	Push bar
Locking points	Single point mortice nightlatch	Single point mortice nightlatch
Suitable for timber or metal doors	Timber	Metal
Suitable for single doors	■	■
Suitable for double door combinations	✱	✱
Min. / Max. door width (per leaf)	665mm/1300mm	665mm/1300mm
Push bar cut on site	■	■
Site reversible	■	■
Dogged hold-open facility	□	□
Finishes available	SE	SE
<b>CE Classification</b>	<b>376B1322AA</b>	<b>376B1322AA</b>

**ADDITIONAL OPTIONS**  
 376/1021 Dogging End Box  
 380/1011 Alarm End Box  
 1413.LE OAD Lever Operated  
 1413.KE OAD Knob Operated

■ Standard  
 □ Available as an option/variant

✱ Used in combination with Briton 376 vertical bolt device on non rebated double doors where the 379.N device is fitted to the first opening leaf.

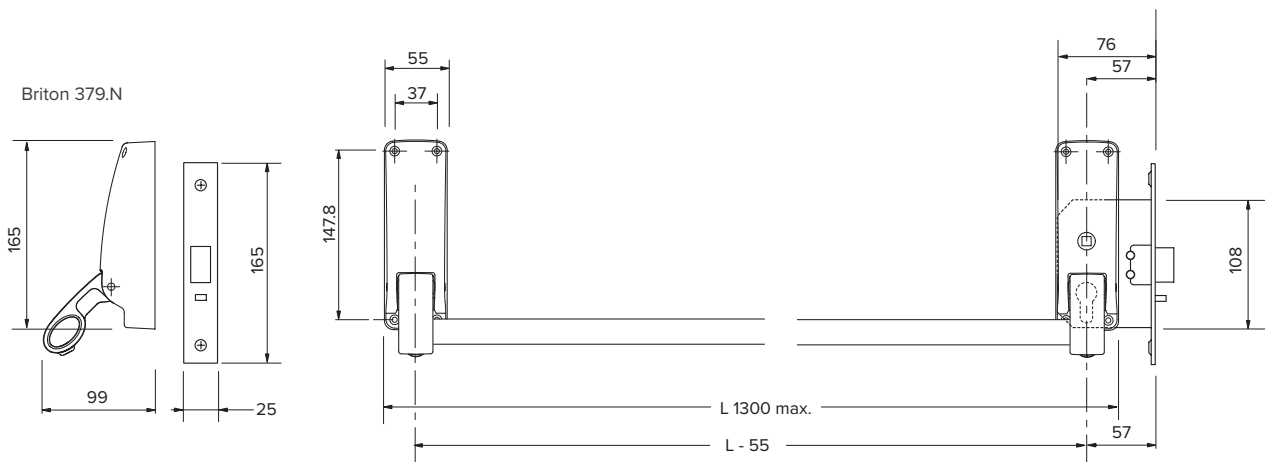

### Door sizes

Suitable for use on doors up to 1300mm wide. Minimum door thickness is 40mm and minimum width of stile is 88mm.

For technical advise call: 0800 834102

All dimensions are in mm

### Finishes

Available in sprayed silver



### Panic Exit Hardware

#### Accessories

A range of additional or alternative components is available for the 370 Series of exit hardware.



#### 376ELTS - Extra long top shoot

Extra long top shoots are designed to be used on doors that require the push bar to be in a lower position e.g schools. It can also be used on doors that exceed 2500mm up to 3350mm high.



#### 376FFKP - Flush face keeper plate

For flush fitting doors and frames a surface mounted flush face keeper plate can be used to secure the bolt.



#### 378DDS - Double door strike

For use on double rebated doors with a rim panic latch on the first opening leaf and a vertical bolt on the second opening leaf.



#### 370PLTM Pullman Latches

Pullman latches offer increased security and provide a smooth latching action, a quiet alternative to the traditional top trip catch.

Pullman Fixing Kits are supplied separately to upgrade existing installations.

#### Fixings

All Briton exit devices are supplied with self-tapping screws suitable for timber and metal doorsets.

For customers who prefer machine screws, alternative fixing packs are available.



#### 379MDS Metal box strike

For use with 379.N or 389.N mortice nightlatch.

## 370 Series



#### 378MDS metal door strike

Metal door strike for use with 378 or 1438 rim devices on single doors, or on the first opening leaf of a double rebated application.



#### 376MDS metal door strike

For vertical panic bolts. Comprises 2 strike plates and 1 trip plate to activate the top tripper.

## Installation and Maintenance

Panic and emergency exit hardware play a vital role in a building's escape route and it is important that these devices are installed, inspected and maintained regularly to ensure safety at all times.

### Exit hardware

All panic hardware installation will be operated by a horizontal "Push bar" or "Touch bar" which runs across the width of the door. The operating bar will be used to operate anything from a single rim latch to multipoint side or top/bottom latches.

Top and bottom latches on Briton 370 panic exit hardware are operated by solid rods which are connected to the operating bar.

### INSTALLATION

Comprehensive installation instructions are provided with all Briton 370 Series exit devices. To maximise the efficiency and life cycle of these products it is important to follow the installation guidance carefully to achieve an accurate installation. To meet the European standard, the door and frame must be in a good condition, correctly hung and not distorted. We recommend verifying the door construction before installation to ensure it allows for the use of the device.

### MAINTENANCE AND CHECKING FUNCTION

In view of the important role the panic and emergency exit device plays in maintaining the safety and security of your building and its occupants, it is recommended that routine maintenance checks are carried out at intervals of not more than 1 month by the occupier or their approved representative.

### Types of maintenance

Much of the routine maintenance recommended consists of a combination of visual and mechanical checks, cleaning and lubrication. Look out for the icons opposite which provide a 'quick glance' reminder of the maintenance required.

#### Visual checks

Primarily making a visual check on the product and surrounding door/frame looking for wear, damage, and general condition.



#### Functional checks

Consists of checking that the product operates properly without any binding or undue force required. Check that any seals or weatherstripping do not inhibit correct operation of the door.



#### Check fixings

Fixings need to be checked regularly and tightened when necessary. Check that no projection of fixings prevents the door from swinging freely.



#### Lubricating

Some products will benefit from periodic lubrication using a light machine oil or as instructed.




#### Cleaning

Build up of grease, dust and harmful chemicals should be removed to prevent corrosion and maintain the product finish.



### Exit Hardware Maintenance

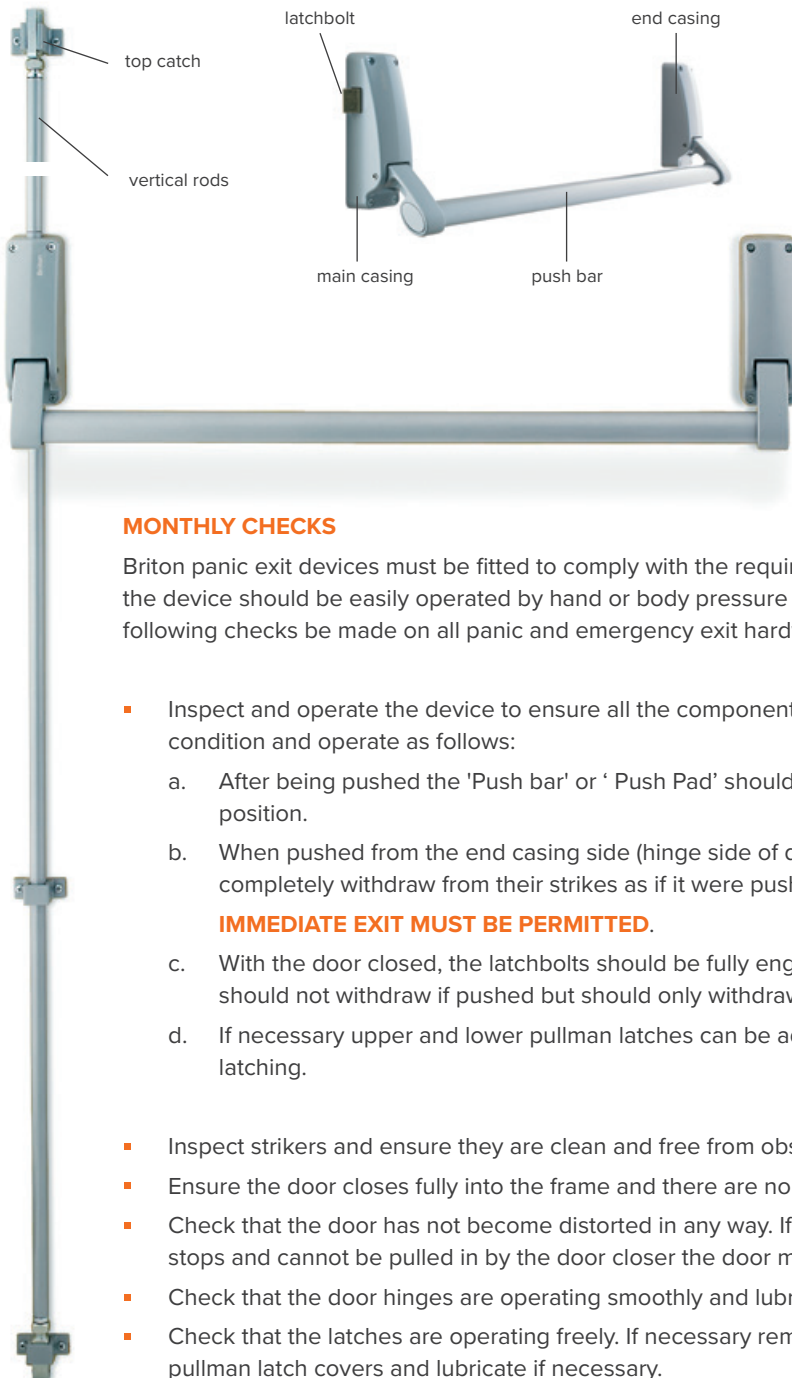

#### MONTHLY CHECKS

Briton panic exit devices must be fitted to comply with the requirements of EN 1125 which states that the device should be easily operated by hand or body pressure in a panic situation. We suggest the following checks be made on all panic and emergency exit hardware:

- Inspect and operate the device to ensure all the components are in satisfactory working condition and operate as follows:
  - a. After being pushed the 'Push bar' or 'Push Pad' should return automatically to its initial position.
  - b. When pushed from the end casing side (hinge side of door) the latchbolt(s) should completely withdraw from their strikers as if it were pushed from the main casing side.
- **IMMEDIATE EXIT MUST BE PERMITTED.**
  - c. With the door closed, the latchbolts should be fully engaged into their strikers. They should not withdraw if pushed but should only withdraw if operated by the 'Push bar'.
  - d. If necessary upper and lower pullman latches can be adjusted to ensure the accuracy of latching.
- Inspect strikers and ensure they are clean and free from obstruction.
- Ensure the door closes fully into the frame and there are no obstructions.
- Check that the door has not become distorted in any way. If the door does not meet the frame stops and cannot be pulled in by the door closer the door may need to be replaced.
- Check that the door hinges are operating smoothly and lubricate if necessary.
- Check that the latches are operating freely. If necessary remove the end box covers and/or pullman latch covers and lubricate if necessary.
- Check that all fixings are tight.

To assist in keeping these products fully operational spare part kits are available.

If problems persist and for some reason the panic device does not operate properly, consult your approved supplier or contact the Allegion Customer Care Team on 0330 8080 617

